

mini CORI-FLOW™

Compact Coriolis Mass Flow Meters & Controllers for
Liquids and Gases



Gas & Liquid



Bronkhorst
CORI-TECH

Contents


Facts about Coriolis Flow Measurement and Control	3
Mass Flow Meters	4
Mass Flow Controllers	8
Liquid Dosing Systems	10
Applications	11
Technical specifications	13
Model number identification	15



Facts about Coriolis Flow Measurement and Control

Coriolis principle of operation

In 1835 Gaspard-Gustave Coriolis, a French scientist, described the effect that moving objects deflect from a straight path when they are viewed from a rotating frame of reference. In the nineteen seventies the "Coriolis effect" started to find applications in mass flow meters: a fluid flows through a vibrating tube and causes changes in frequency, phase shift or amplitude, proportional to the mass flow through the tube, giving the density of the fluid as secondary output.

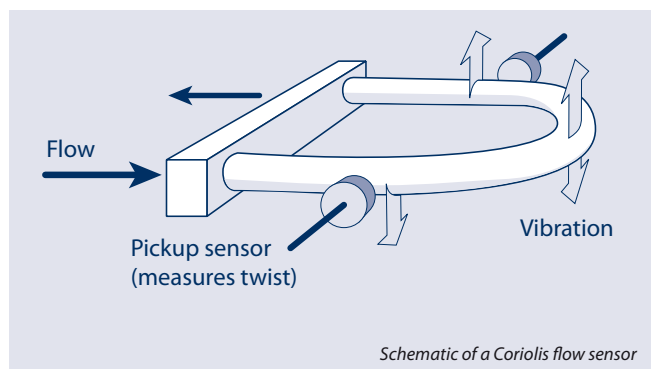

Coriolis versus other principles of flow measurement

Other flow meter principles measure the velocity, volume or differential pressure and it is necessary to correct for density and/or for pressure and temperature in order to determine the mass flow of a particular fluid stream. The direct measurement of the mass flow is generally much more accurate. Thermal Mass Flow Meters show a direct, proportional relation between mass flow and a temperature difference, picked up by a sensor. However, since these instruments operate on the basis of heat transfer, their calibrations are dependent of the fluid's specific heat. Not so for Coriolis Mass Flow meters! The flow meters exactly measure the throughput of fluid, no matter if it is gaseous or in the liquid phase. Furthermore Coriolis Mass Flow Meters distinguish themselves by their high accuracy and fast response time.

Current market of Coriolis mass flow meters

Traditionally, Coriolis Mass Flow Meters are mainly applied for medium to high flow rates of liquids. Applications are found in industrial processes e.g. in chemical plants, the oil & gas market and in the food and beverage industry. Measuring low flow rates has, so far, been complicated and costly.

The **mini CORI-FLOW™** solution

Coriolis principle of operation

The objective for the development of the **mini CORI-FLOW™** series was to achieve a compact, cost-effective Mass Flow Meter/Controller for accurate measurement and control of (very) low flow rates. The unique design of the miniature Coriolis sensor features unsurpassed performance, even with changing operating conditions in pressure, temperature, density, conductivity and viscosity.

Compact Coriolis Mass Flow Controllers

Contrary to many other Coriolis flow meters on the market, **mini CORI-FLOW™** offers integrated PID control and close-coupled control valves or pumps, thus constituting very compact, cost- and space-saving Coriolis Mass Flow Controllers.

Not just liquids but also gases

Unlike some other Coriolis Mass Flow meters, **mini CORI-FLOW™** can also be applied for gas flow applications.

(Very) low flow ranges

The unique sensor design of **mini CORI-FLOW™** permits accurate measurement of flow rates as small as 0,1...5 g/h (1,3...66,6 ml_g/min N₂) up to 0,3...30 kg/h (4...400 l_g/min N₂).

Digital technology for RS232 and fieldbus communication

mini CORI-FLOW™ features state-of-the-art digital technology, offering fieldbus interface options and additional functions such as totalisation and alarms.

The instruments can be tuned according to customer requirements using the RS232/fieldbus interface and a number of free to use software tools.

Alternative to thermal MFCs

mini CORI-FLOW™ was designed to enable easy exchange of traditional thermal MFCs.

mini CORI-FLOW™ flow controllers have the same footprint and also electrically the instruments feature the same options for analog and fieldbus communication. Compared to thermal MFCs, Coriolis based flow controllers are more accurate, faster and offer independence from fluid properties.

mini CORI-FLOW™ Mass Flow Meters

General

mini CORI-FLOW™ series by Bronkhorst Cori-Tech B.V. are precise and compact Mass Flow Meters and Controllers, based on the Coriolis measuring principle. Designed to cover the needs of the low flow market, there are 3 models to overlap flow ranges from 5 g/h up to 30 kg/h (full scale values), each offering “multi-range” functionality: factory calibrated ranges can be rescaled by the user, maintaining the original accuracy specs. As a result of this, customers are able to reduce the variety of instruments and thus reduce the cost of ownership. The instruments are equipped with a robust IP65 weatherproof housing and are available with optional ATEX approval for use in Zone 2 hazardous areas.

Superior Coriolis flow sensor

Instruments of the **mini CORI-FLOW™** series contain a uniquely shaped, single loop sensor tube, forming part of an oscillating system. When a fluid flows through the tube, Coriolis forces cause a variable phase shift, which is detected by sensors and fed into the integrally mounted pc-board. The resulting output signal is strictly proportional to the real mass flow rate. Coriolis mass flow measurement is fast, accurate and inherently bi-directional. The **mini CORI-FLOW™** features density and temperature of the fluid as secondary outputs.

Fields of application

mini CORI-FLOW™ instruments can be applied for both gases and liquids in process fluid measurement or control systems in semiconductor processing, in fuel cell technology, in food, (petro-) chemical and pharmaceutical industries or analytical installations and in liquid dosing systems for micro reactors, amongst many others.

Capacities

Model	smallest range	nominal range	highest range*
M12	0,1...5 g/h	1...100 g/h	2...200 g/h
M13	1...50 g/h	10...1000 g/h	20...2000 g/h
M14	0,03...1 kg/h	0,1...10 kg/h	0,3...30 kg/h


* Maximum capacities depend on the available pressure difference across the mass flow meter, especially when used on gases. See diagrams and tables on pages 6 and 7 of this brochure.

Features

- > direct mass flow measurement, independent of fluid properties
- > high accuracy, excellent repeatability
- > multi-range: easy on site re-ranging via digital interface (effective turndown 2000:1, typical M13)
- > IP65 design, optional ATEX approval Cat.3, Zone 2
- > metal-sealed construction
- > optional bi-directional measurement
- > additional density and temperature outputs
- > standard analog 0...5(10) Vdc and 0(4)...20 mA and digital communication
- > optional fieldbus interface (DeviceNet™, PROFIBUS DP, Modbus-RTU or FLOW-BUS)
- > alarm and (batch) counter functions



M13 Mass Flow Meter

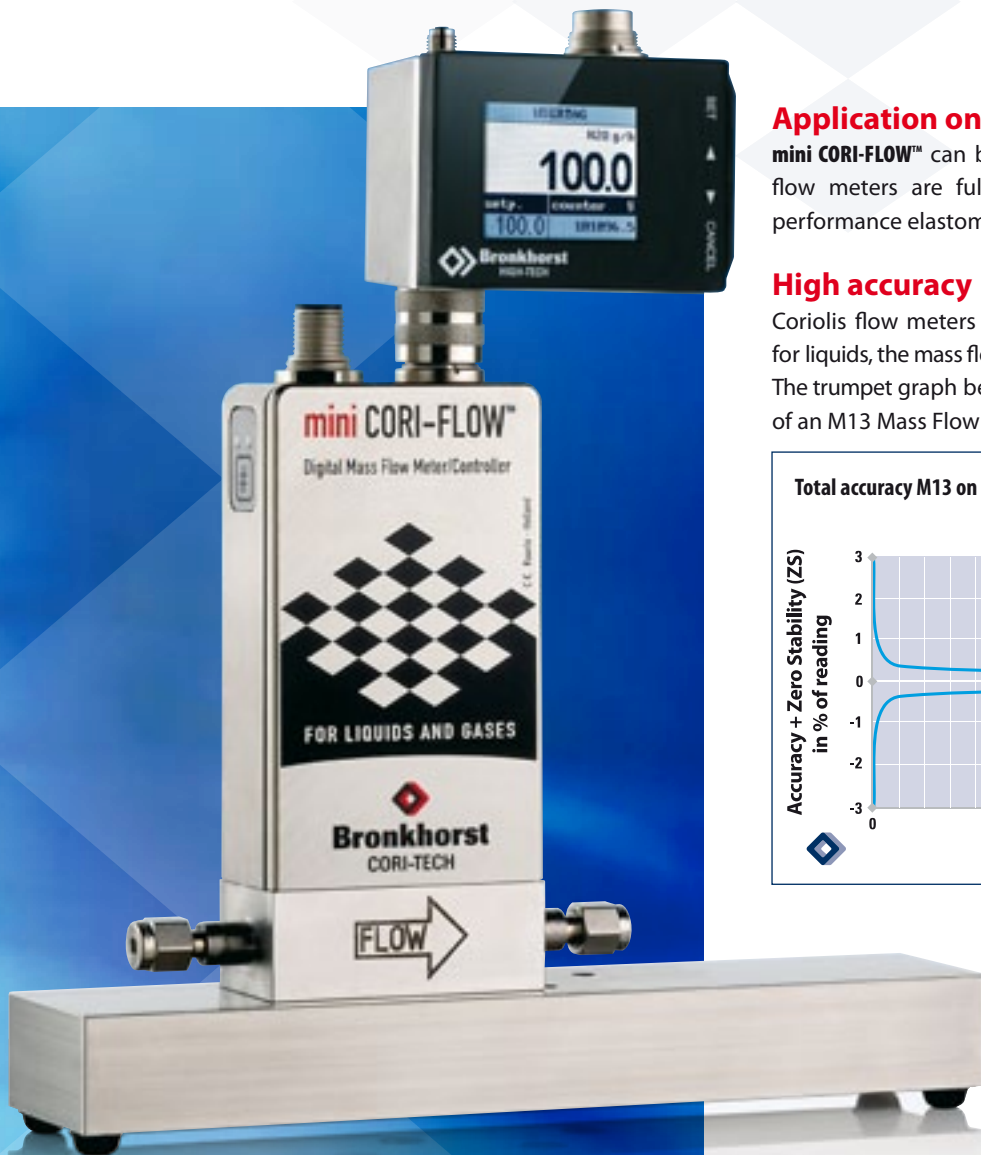

mini CORI-FLOW™ Mass Flow Meter with local readout module, mounted on an optional heavy mass body

Application on liquids


mini CORI-FLOW™ can be applied for most liquid types. The mass flow meters are fully metal sealed, controllers have a high performance elastomeric valve seat, made of Kalrez®.

High accuracy


Coriolis flow meters are unmatched in accuracy. When applied for liquids, the mass flow accuracy is better than $\pm 0,2\%$ Rd.

The trumpet graph below illustrates the total mass flow accuracy of an M13 Mass Flow Meter used on liquid.

Total accuracy M13 on liquid ($\pm 0,2\%$ Rd + $\pm 0,2$ g/h ZS)

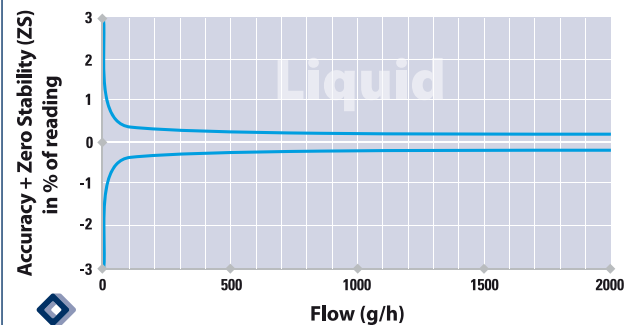

Pressure drop sensor for water (at 20°C)

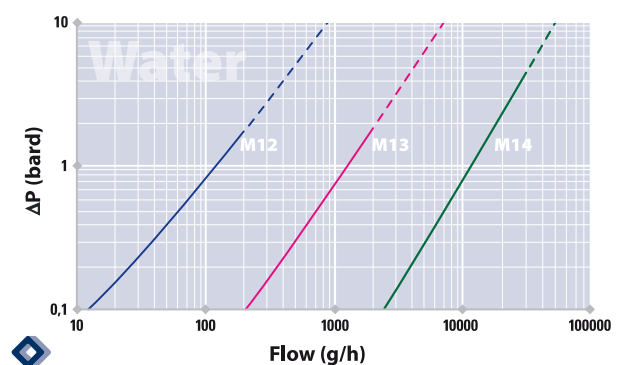


mini CORI-FLOW™ Mass Flow Meters

Application on gases

In comparison with thermal mass flow devices, the Coriolis measuring principle offers the following advantages:


- no conversion factors (if scaled in units of weight)
- possibility to measure unknown fluids or variable mixtures
- can measure (super-) critical gases
- superior accuracy and response time

For gas flow applications, the mass flow accuracy is better than $\pm 0,5\%$ Rd. The trumpet graph below illustrates the total mass flow accuracy of an M13 Mass Flow Meter used on gas.

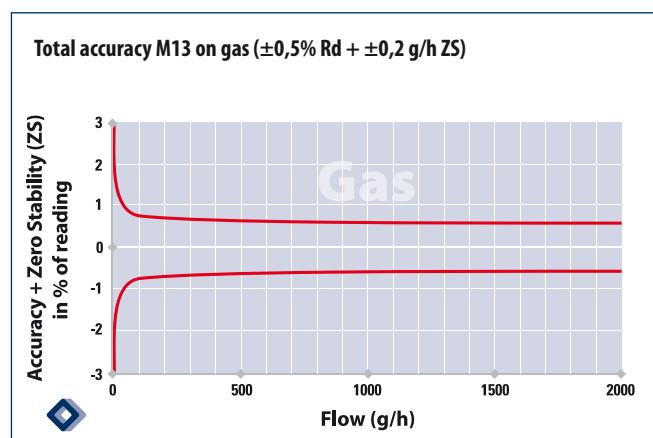

When engineering your process system for gases consideration must be given to the pressure drop across the flow meter and its associated piping. The tables on the next page illustrate the maximum flow rates for **mini CORI-FLOW™** Mass Flow Meters as a function of the inlet pressure (P1) for a number of common gases.


Dimensions Mass Flow Meter

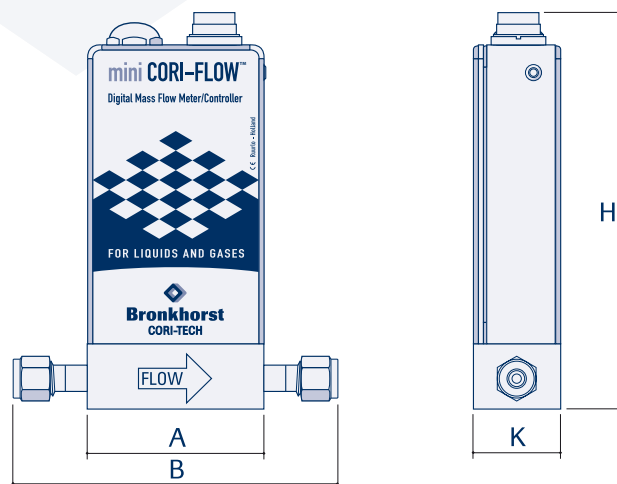

Model	A	B	H	K
M12/M13/M14 (1/4" OD)	64	118	144	32
M12/M13/M14 (1/2" OD)	64	115	144	32
M12/M13/M14 (1/4" VCR)	64	106	144	32

Dimensions in mm

Supply pressure sensor for air (P2 = 1 bara, T = 20°C)

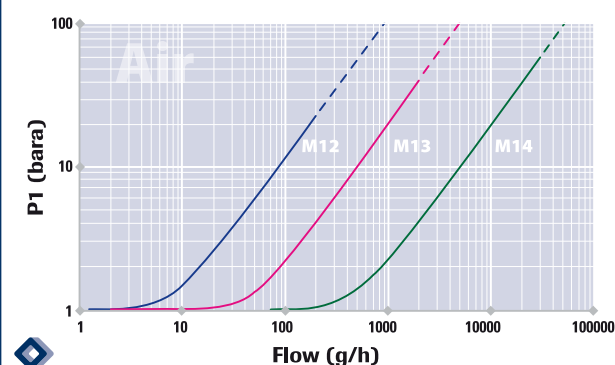

Approx. maximum gas flow rates as function of various inlet pressures

(P2 = 1 bara and T = 20°C)

M12 Mass Flow Meter																				
Gas	Air/N ₂		Ar		CO ₂		CO		C ₂ H ₆		He		H ₂		CH ₄		N ₂ O		O ₂	
	g/h	l _n /min	g/h	l _n /min	g/h	l _n /min	g/h	l _n /min	g/h	l _n /min	g/h	l _n /min	g/h	l _n /min	g/h	l _n /min	g/h	l _n /min	g/h	l _n /min
P1 (bara)																				
2	15	0,2	18	0,2	19	0,2	15	0,2	16	0,2	6	0,5	4	0,7	11	0,3	19	0,2	17	0,2
3	25	0,3	30	0,3	30	0,3	24	0,3	25	0,3	9	0,8	6	1,2	18	0,4	30	0,3	26	0,3
5	42	0,5	50	0,5	51	0,4	41	0,5	43	0,5	15	1,4	11	2,0	31	0,7	51	0,4	42	0,5
10	80	1,0	100	1,0	105	1,0	85	1,2	85	1,0	30	3,0	22	4,0	65	1,5	105	1,0	90	1,0
20	168	2,2	200	1,8	200	1,7	166	2,2	172	2,1	63	5,8	44	8,2	125	2,9	200	1,7	177	2,1
50	200	2,6	200	1,8	200	1,7	200	2,7	liquid	liquid	157	15,0	111	20,0	200	4,6	200	1,7	200	2,3
100	200	2,6	200	1,8	liquid	liquid	200	2,7	liquid	liquid	200	19,0	200	37,0	200	4,6	liquid	liquid	200	2,3
200	200	2,6	200	1,8	liquid	liquid	200	2,7	liquid	liquid	200	19,0	200	37,0	200	4,6	liquid	liquid	200	2,3

M13 Mass Flow Meter																				
Gas	Air/N ₂		Ar		CO ₂		CO		C ₂ H ₆		He		H ₂		CH ₄		N ₂ O		O ₂	
	g/h	l _n /min	g/h	l _n /min	g/h	l _n /min	g/h	l _n /min	g/h	l _n /min	g/h	l _n /min	g/h	l _n /min	g/h	l _n /min	g/h	l _n /min	g/h	l _n /min
P1 (bara)																				
2	66	0,8	78	0,7	82	0,7	65	0,9	68	0,8	25	2,3	18	3,2	50	1,1	82	0,7	70	0,8
3	105	1,3	124	1,2	130	1,1	104	1,4	108	1,3	39	3,7	28	5,2	78	1,8	130	1,1	111	1,3
5	180	2,3	212	2,0	223	1,9	177	2,4	185	2,3	67	6,3	48	8,8	134	3,1	223	1,9	189	2,2
10	364	4,7	428	4,0	450	3,8	358	4,8	373	4,6	135	12,6	96	17,8	271	6,3	450	3,8	329	4,5
20	730	9,4	857	8,0	903	7,6	718	9,6	747	9,2	271	25,3	193	35,7	544	12,6	903	7,6	767	9,0
50	1826	23,5	2000	19,0	2000	17,0	1796	24,0	liquid	liquid	679	63,3	482	89,3	1360	31,6	2000	17,0	1920	22,4
100	2000	27,0	2000	19,0	liquid	liquid	2000	27,0	liquid	liquid	1357	126,7	963	178,5	2000	46,0	liquid	liquid	2000	23,0
200	2000	27,0	2000	19,0	liquid	liquid	2000	27,0	liquid	liquid	2000	187,0	1926	357,1	2000	46,0	liquid	liquid	2000	23,0

M14 Mass Flow Meter																				
Gas	Air/N ₂		Ar		CO ₂		CO		C ₂ H ₆		He		H ₂		CH ₄		N ₂ O		O ₂	
	g/h	l _n /min	g/h	l _n /min	g/h	l _n /min	g/h	l _n /min	g/h	l _n /min	g/h	l _n /min	g/h	l _n /min	g/h	l _n /min	g/h	l _n /min	g/h	l _n /min
P1 (bara)																				
2	880	11	1040	10	1090	9	865	11	900	11	325	30	230	43	660	15	1090	9	925	11
3	1400	20	1600	15	1700	14	1380	20	1400	17	500	45	370	70	1050	25	1750	15	1480	18
5	2400	30	2800	26	2960	25	2350	31	2450	30	890	83	630	120	1780	41	2960	25	2510	30
10	4750	63	5700	53	6000	50	4750	63	4950	61	1800	168	1280	240	3600	83	6000	50	5100	60
20	9700	125	11400	106	12000	100	9530	127	9900	122	3600	336	2550	470	7220	168	12000	100	10200	120
50	24200	310	28500	270	30000	250	23800	318	liquid	liquid	9010	840	6400	1180	18060	420	30000	250	25500	300
100	30000	387	30000	280	liquid	liquid	30000	400	liquid	liquid	18020	1680	12800	2370	30000	700	liquid	liquid	30000	350
200	30000	387	30000	280	liquid	liquid	30000	400	liquid	liquid	30000	2800	25600	4740	30000	700	liquid	liquid	30000	350

Notes:

- (1) For all gas flow values the measuring error is $\pm 0,5\%$ Rd \pm zero stability
- (2) "Liquid": Fluid will be in liquid phase under certain conditions: not recommended; phase changes in instrument should be avoided!
- (3) For a gas flow meter the maximum flow will decrease with increasing back pressure.
- (4) For a gas flow controller the maximum flow under the same operating conditions will be approx. 0,75 times the indicated flow rate for a meter.
For example: The maximum flow through an M13 meter only at P1=10 bara and P2=1 bara at 20°C is approx. 475 g/h or 6,3 l_n/min Air.
Under the same conditions the maximum flow through an M13 controller is approx. 0,75 * 475 = 356 g/h or 4,7 l_n/min.
- (5) To control the same amount of gas indicated in the table, please raise the inlet pressure (P1) by 33% (divide P1 by 0.75).
For example: To control 475 g/h or 6,3 l_n/min Air the inlet pressure should be increased from 10 bara to 13,3 bara (at P2 = 1 bara and T=20°C)

mini CORI-FLOW™ Mass Flow Controllers

General

The pc-board of a **mini CORI-FLOW™** Mass Flow device features integrated, adaptable PID control for fast and smooth control of any electronically driven control valve. Depending on the application this could be an integrated direct acting valve or a separately mounted valve for special tasks, e.g. a pressure actuated control valve. Integrated control valves for liquid applications have a purge connection on top of the sleeve that enables easy elimination of air or gas when starting up the system. For liquid dosing Bronkhorst Cori-Tech offers an alternative way to control the flow. Instead of using a control valve, the Coriolis flow meter can be combined with a gear pump, thus eliminating the need of pressurising the liquid source.

Alternative to Thermal Gas Mass Flow Controllers

Compared to traditional thermal MFCs, Coriolis based flow controllers offer better accuracy and independence of fluid properties. There are no moving parts or obstructions in the flow path. Furthermore the Coriolis sensor is by nature faster than a sensor based on heat transfer.

mini CORI-FLOW™ flow controllers have the same footprint as typical thermal MFCs for equivalent flow ranges. Also electrically the instruments feature the same analog (0-5 Vdc / 4-20 mA) and digital (RS232) outputs as a standard, with optional interface to Profibus DP, DeviceNet™, Modbus-RTU or FLOW-BUS. The enclosure of the Mass Flow Controller is rugged, weatherproof (IP65) and available with optional ATEX approval for use in Zone 2 hazardous areas. The PN100 rated control valves are available in normally closed (nc) and normally open (no) configurations.

Integrated control valve options:

- V10I: Gas flow control valve (nc)
- V11I: Gas flow control valve (no)
- V14I: Liquid flow control valve (nc)

Capacities

Model	smallest range	nominal range	highest range*
M12V1NI	0,1...5 g/h	2...100 g/h	4...200 g/h
M13V1NI	1...50 g/h	20...1000 g/h	40...2000 g/h
M14V1NI	0,03...1 kg/h	0,2...10 kg/h	0,6...30 kg/h

* The maximum capacities depend on the available pressure difference, especially when used on gases (see page 7).

Fields of applications

mini CORI-FLOW™ Meters/Controllers are suitable for applications in industrial environment (incl. optional ATEX Cat.3 Zone 2), laboratories and OEM installations in the following markets (typically):

- > pilot plants
- > fuel cell technology
- > semiconductor processing
- > food & pharmaceutical industries
- > analytical installations
- > liquid dosing systems for micro reactors
- > plasma surface technology
- > (petro-) chemical industries

Features

In addition to the features already mentioned for the Mass Flow Meters, **mini CORI-FLOW™** Controllers offer:

- > fast and stable control
- > integrated electronics with PID controller
- > very compact design: same footprint as thermal MFC
- > metallic outer seals; Kalrez® plunger seat



mini CORI-FLOW™ Mass Flow Controllers

Pressure drop Mass Flow Controllers


As a rule of thumb the pressure difference (ΔP) across the control valve should be at least 50% of the total ΔP across the system for liquid applications, for gases preferably even higher (approx 75%).

Close-coupled control valves

For control applications normally an MFC with integrated control valve will be preferred, because it is the most compact and economical solution. Sometimes, however, a separate control valve could be more practical or offer technical advantages. This could be a standard direct acting, electro magnetic control valve or, for instance, a pilot operated valve for applications with high differential pressure.

Control performance


mini CORI-FLOW™ Mass Flow Controllers feature a highly stable control output and fast response; see depicted response curve with some typical setpoint changes.

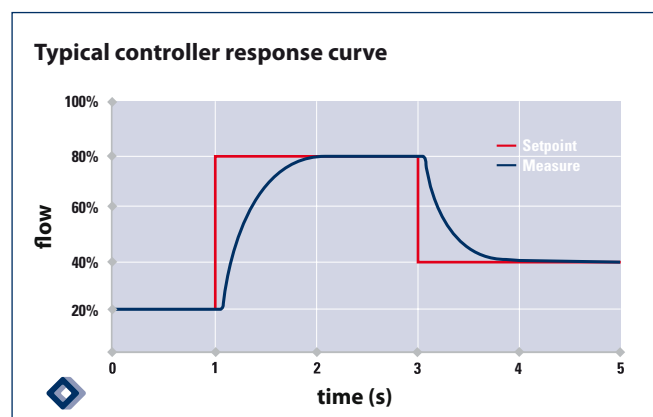

Thanks to the extremely fast sensor (50...200 msec) it is possible to achieve very fast control e.g. for dosing applications. Contact your local distributor for more information.

Mass Flow Meter with pressure actuated control valve

Dimensions Mass Flow Controller

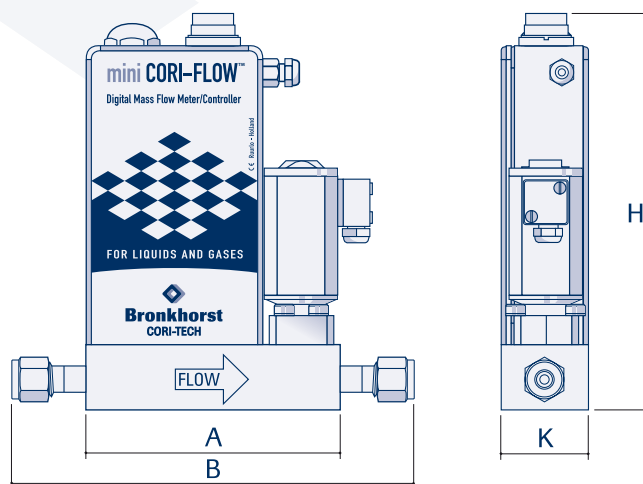

Model	A	B	H	K
M12V1NI/M13V1NI/M14V1NI (1/4"OD)	92	146	144	32
M12V1NI/M13V1NI/M14V1NI (1/8"OD)	92	143	144	32
M12V1NI/M13V1NI/M14V1NI (1/4"VCR)	92	124	144	32

Dimensions in mm




mini CORI-FLOW™ Liquid Dosing Systems, using flow meter controlled pumps

An alternative way of control

In some applications it is not possible or not recommended to use a control valve, for instance when a vessel with liquid cannot be pressurised. As an alternative, Bronkhorst Cori-Tech can offer virtually pulse-free gear pumps, HPLC or diaphragm pumps, close-coupled to the Coriolis flowmeter.

Liquid dosing system

A **mini CORI-FLOW™** liquid dosing system consists of a Coriolis flow meter, a gear pump and interconnecting material. Furthermore Bronkhorst Cori-Tech will take care of electrical and mechanical connection, testing and, if possible optimisation including the PID-integrated controller.

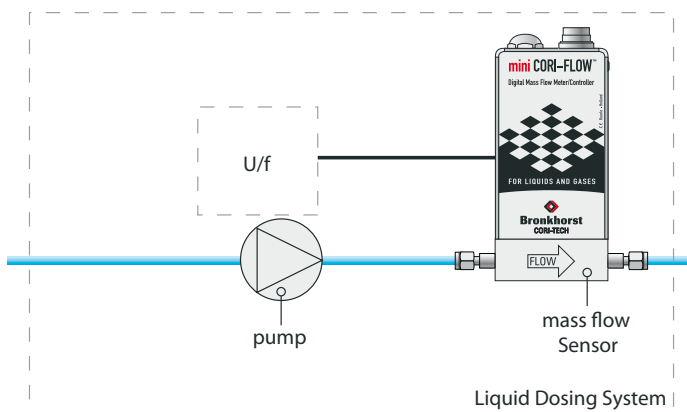

A complete series of pumps is available for very small through to higher flow rates, for higher pressures and for aggressive fluids. Further to operation in analog mode, the Liquid Dosing System can also be used digitally with RS232 or with an on-board fieldbus interface. Due to easy re-ranging of the instrument via digital interface, control ranges can be increased up to 1:2000!

Features

- > simple and compact assembly; easy to use
- > no need to pressurise liquid source
- > pump controlled by mass flow instrument with adjustable PID-controller via voltage output signal
- > complete dosing system with small dimensions
- > direct mass flow measurement/control (not volumetric)
- > high accuracy and stability (nearly pulse free)
- > response alarm to protect pump against damage due to running dry
- > desired flow to be set via: analog 0...5(10) V / 0(4)...20 mA or digital communication by RS232, PROFIBUS DP, DeviceNet™, Modbus-RTU or FLOW-BUS



Liquid dosing system consisting of a **mini CORI-FLOW™** Mass Flow Meter, close-coupled to a gear pump.


mini CORI-FLOW™ Applications

Gas or liquid precursor delivery

In deposition processes various precursor fluids must be accurately controlled, either in gas phase or as a liquid. The high precision Mass Flow Controllers of the **mini CORI-FLOW™** series are particularly suitable for these demanding applications. Thanks to the “multi-range” feature, Original Equipment Manufacturers (OEM customers) are able to drastically reduce the variety of spare instruments and thus the cost of ownership, since the instruments are easy to re-range.

mini CORI-FLOW™ for additive dosage

Many applications ask for compact, accurate measurement and control of additives to be proportionally dosed into a main flow. By using **mini CORI-FLOW™** instruments it is easy to set up compact, autonomous working systems that offer this functionality without the need of external computer hard- and software. In the setup below, the master flow meter measures the main flow and is connected to FLOW-BUS (a Bronkhorst fieldbus). The slave instrument, which has been pre-set to follow the master with a certain ratio, is also connected to FLOW-BUS.

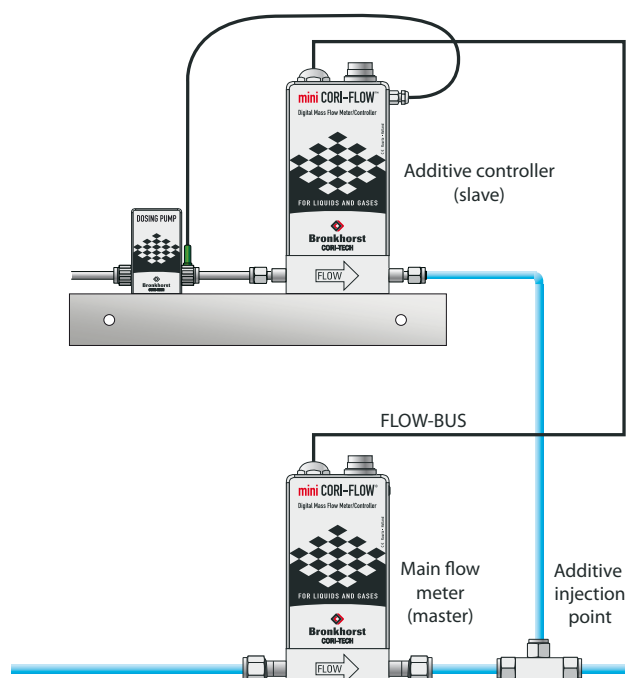


Ratio control: slave follows master with adjustable ratio

As a result of a variable main flow, the slave-instrument responds to the changed master output signal, received via FLOW-BUS. The slave-instrument will re-calculate its setpoint. The pump with integrated U/f converter translates the PID-controller output voltages into rotation speed to reach the desired flow rate.

mini CORI-FLOW™ used as a batch counter

The **mini CORI-FLOW™** instrument measures the flow rate and the integrated PID-controller drives a proportional valve. The flow rate setpoint can be provided using the **mini CORI-FLOW's** analog input or via digital communication interfaces (RS232 or fieldbus). The desired batch can be programmed into the integrated counter limit value. After each batch, the flowmeter can be reset using the button on the instrument, via an external switch or via the digital interface. Each time when the counter limit (batch) has been reached, the **mini CORI-FLOW™** will close the valve until the next reset. These integrated digital features enable the user to define a highly accurate, fast, repeatable and compact batching/dosing system. For ultra-fast batching it is also possible to use a shut-off valve in combination with a needle valve for flow limitation.

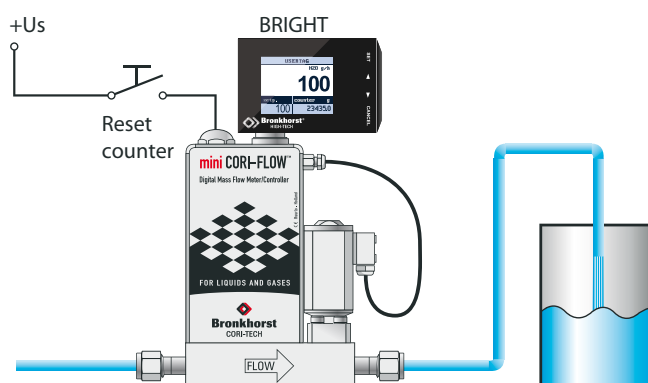

Batch control with optional local Readout/Control module

mini CORI-FLOW™ Applications


Supercritical gas measurement and control

Fluids like carbon dioxide (CO_2) and ethylene (C_2H_4) are difficult to measure when they move towards the inter-phase stage between being a liquid and a gas. For example, for CO_2 this occurs at temperatures $>20^\circ\text{C}$ and pressures higher than approx. 30 bara. Under these conditions, physical properties like density (ρ) and heat capacity (C_p) change very rapidly as a result of pressure or temperature variations. This makes an accurate mass flow measurement, based on the thermal principle, very difficult.

mini CORI-FLOW™ offers a solution here because of the true mass flow measurement, **independent of physical properties**.

The **true** mass flow of the molecules is measured, regardless of whether the fluid is in gas phase,

in liquid phase or indeed somewhere in between. Experiences in the field have proven that this principle of measuring is very accurate and reliable. For control applications Bronkhorst Cori-Tech can offer a flow meter in combination with a metal sealed, pressure actuated control valve. Please contact factory for a customised advice.

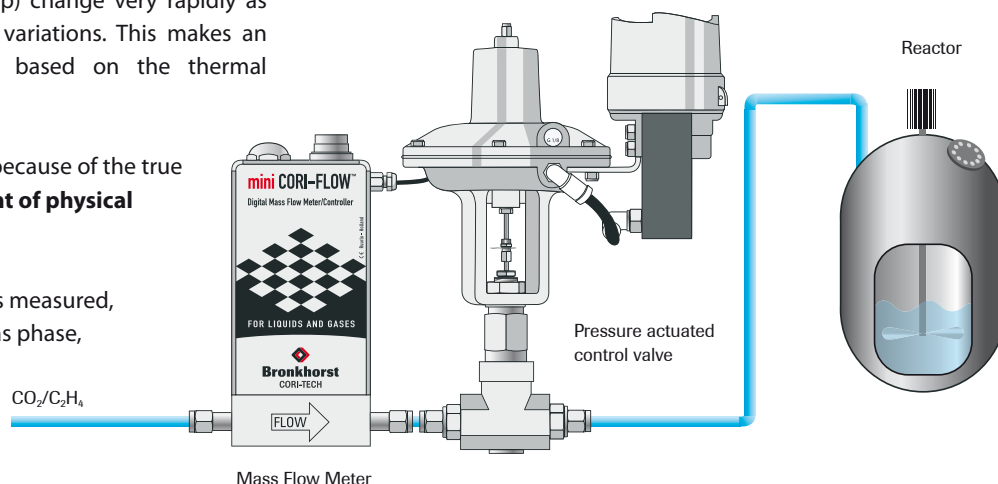

mini CORI-FLOW™ with pressure actuated control valve

CORI-FILL™: Compact Fluid Dosing Assemblies

Each Compact Fluid Dosing Assembly consists of a Coriolis Mass Flow Meter of the **mini CORI-FLOW™** or **CORI-FLOW™** series and a valve or a (gear) pump. The onboard PID-controller of the flow meter will be optimized for controlling the valve or the (gear) pump and enables an immediate start of dosage after connecting power and fluid accessories. Just enter the desired flow or batch at the operation module (or remotely by computer) and the compact unit will dose true mass flow, for example independent of ambient temperature and back pressure. Using the integrated **CORI-FILL™** technology, the Coriolis meter's totalizer is capable of highly accurate batch dosage. It also ensures the actuator will react as soon as the batch has been reached. Normally several components would be needed to achieve this:

- flowmeter
- valve/pump
- batchcounting module/PLC
- software handling these items

CORI-FILL™ offers all this functionality in one component, in one assembly and from one supplier, without the need of complex programming of additional hardware.



Applications

CORI-FILL™ has been successfully applied for dosage of additives, fragrances, flavours, colourants and sterilization fluid (H_2O_2)

See separate brochure downloadable at: www.cori-fill.com

Technical specifications

Flow ranges

	Unit	M12	M13	M14
Minimum full scale	[g/h]	5	50	1000
Nominal flow	[g/h]	100	1000	10000
Maximum full scale	[g/h]	200	2000	30000
Minimum flow	[g/h]	0,1	1	30
Rangeability meter		1:100	1:100	1:100
Rangeability controller		≥ 1:50	≥ 1:50	≥ 1:50

Mechanical parts

Material (wetted parts)	Stainless steel AISI 316L or equivalent Optional: Hastelloy-C22
Process connection	Compression type (welded) or face seal couplings
Outer seals	Metal
Valve seat (controllers)	Kalrez®-6375, other on request
Weight	Meter: 1,2 kg; Controller: 1,7 kg
Ingress protection	IP65 (weatherproof)
Leak integrity	Outboard < 2 x 10 ⁻³ mbar l/s He
Pressure rating	Meter: 200 bar*; Compact controller: 100 bar* Separate valve up to 200 bar*

* Higher on request.

* Higher on request.

Performance

Mass flow accuracy liquids	±0,2% of rate
Mass flow accuracy gases	±0,5% of rate
Repeatability	±0,05% of rate ±1/2 [ZS x 100/flow]%
(based on digital output)	(ZS = Zero Stability)

Note: optimal accuracy will be reached after approx. 30 minutes after instrument power-up.

	Unit	M12	M13	M14
Zero stability (ZS)*	[g/h]	< 0,1 **	< ±0,2	< ±6
Density accuracy	[kg/m³]	< ±5	< ±5	< ±5
Temperature accuracy	[°C]	±0,5	±0,5	±0,5
Temperature effects				
Zero drift	[g/h/°C]	±0,01	±0,02	±0,5
Span drift	[%Rd./°C]	±0,001	±0,001	±0,001
Initial heating at zero flow	[°C]	≤ 15 ***	≤ 15 ***	≤ 15 ***

* The zero stability is guaranteed at constant temperature and for unchanging process and environment conditions.

** Better on request.

*** Total heating up of instrument depends on flow rate, heat capacity fluid, T amb, T fluid and cooling capacity.

Mounting	In any position (attitude sensitivity negligible) ****
Device temperature	0 ...70°C; for ATEX Cat.3, Zone 2 max. 50°C
Typical meter response time (t98%)	0,2 s
Typical settling time controller (<2% of setpoint)	1 s

**** In order to guarantee the zero stability the instrument needs to be rigidly bolted to a stiff and heavy mass or construction. External shocks or vibrations should be avoided. Instruments mounted closely together need to be rigidly bolted to separate stiff and heavy masses or constructions to avoid interference (cross-talk).

Technical specifications

Electrical properties

Power supply	+15 ... 24 Vdc $\pm 10\%$ Max. ripple recommended: 50 mV tt
Power consumption	Meter: 3 W; Controller: max. 7 W
Analog output / command	0 ... 5 (10) Vdc or 0 (4) ... 20 mA (sourcing output)
Digital communication	Standard: RS232 Options: PROFIBUS DP, DeviceNet™, Modbus-RTU, FLOW-BUS
Electrical connection	
Analog/RS232	8-pin DIN male;
PROFIBUS-DP®	bus: 5-pin M12 female; power: 8-pin DIN male;
DeviceNet™/Modbus-RTU/ FLOW-BUS	5-pin M12 male

Calibration


References	Traceable to Dutch and international standards
Calibration fluid	Multi-range calibration on H ₂ O

Specifications are based on reference conditions of 20°C. Technical specifications subject to change without notice



Mass Flow Meter with electro magnetic control valve

Model number identification

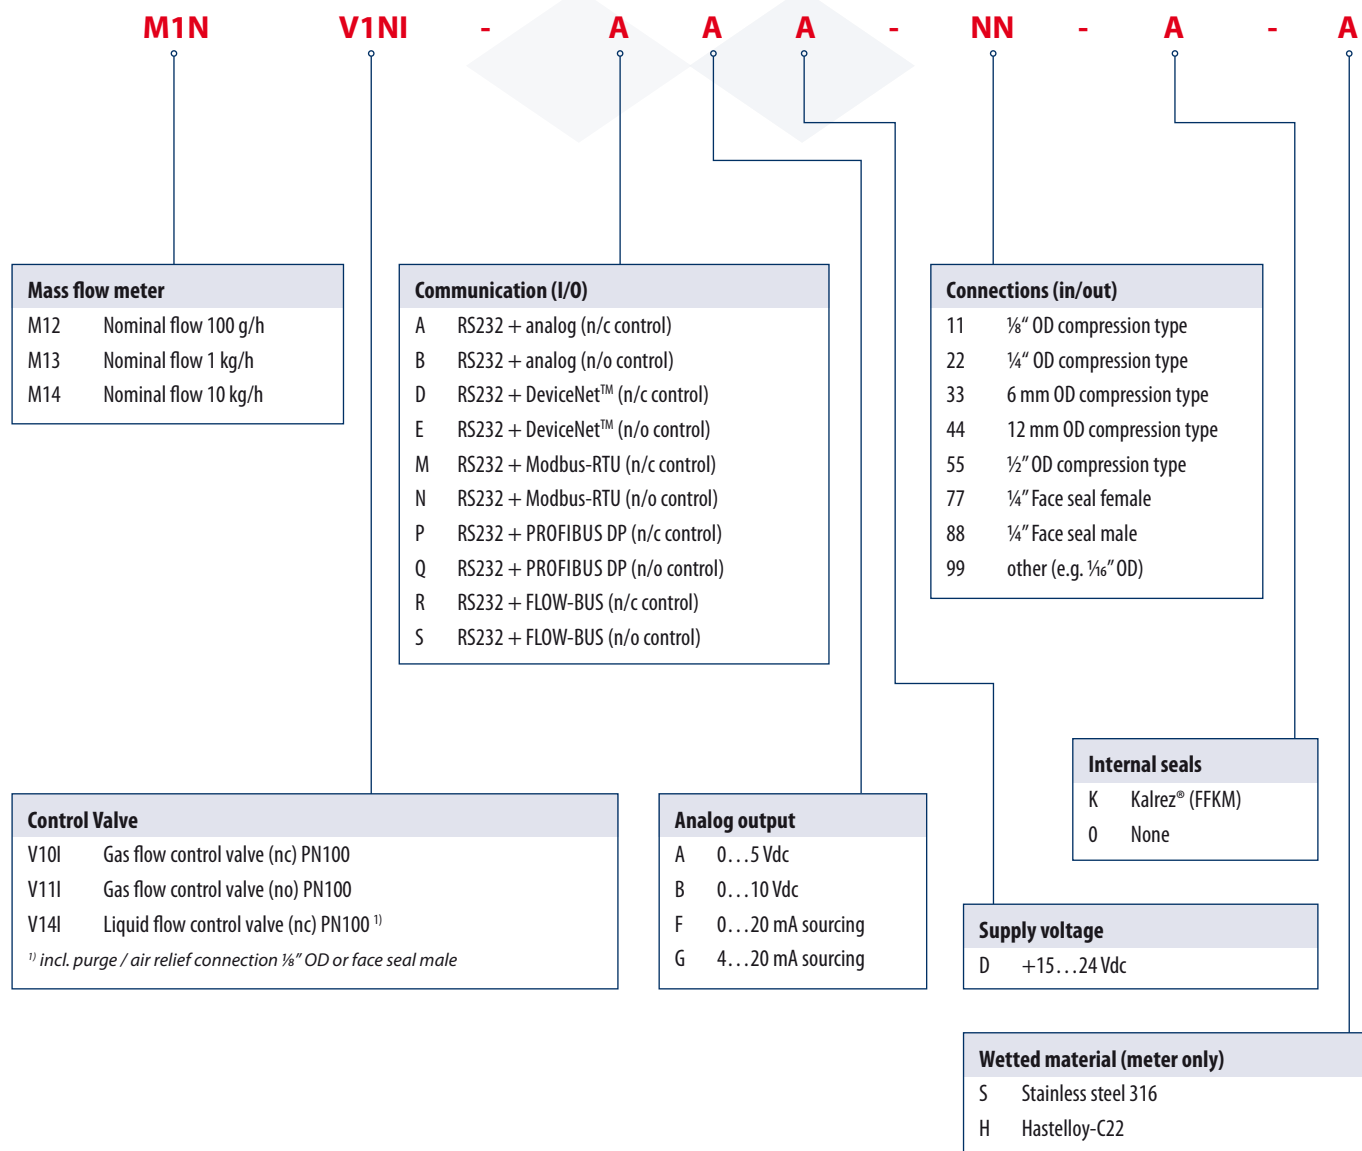

Global Sales & Service Offices

◆ Argentina

Dastec SRL
Pichincha 1580
C1249ABH - Ciudad de Buenos Aires
T +54 11 4343 6200 / 4331 2288, F +54 11 4334 3120
I www.dastecsrl.com.ar, E dastecsrl@dastecsrl.com.ar

◆ Australia

Anri Instruments and Control Ltd
Unit 29, 756-758 Burwood HWY
Ferntree Gully, VIC 3156
T 03975-23782, F 03975-23783
I www.anri.com.au, E sales@anri.com.au

◆ Austria

HL-Trading GmbH
Rochusgasse 4, A-5020 Salzburg
T 0662-439484, F 0662-439223
I www.hl-trading.at, E sales@hl-trading.at

◆ Belgium and Luxemburg

Gefran-Flowcor
Lammerdries-zuid 14A, B-2250 Olen
T 014-248181, F 014-248180
I www.gefran.com/nl/benelux, E info@gefran.be

◆ Brazil

Hirsa Sistemas de Automacao e Controle LTDA
Av. Cel. Luiz de Oliveira Sampaio, 195
Ilha do Governador, Rio de Janeiro - RJ
Cep: 21931-010
T (21) 3396 4454, F (21) 3396 9661
I www.hirsa.com.br, E hirsa@hirsa.com.br

◆ Canada

Hoskin Scientific
3735 Myrtle Street, Burnaby, BC, V5C 4E7
T 604-872-7894, F 604-872-0281
I www.hoskin.ca, E salesv@hoskin.ca

◆ China

Advanced Technology Materials Corp.
Room 207, ZhongChen Office Building, No.2 Central
LiZe Road, Beijing Wangjing New Industrial Zone,
Chaoyang District, Beijing 100102
T (10) 8499 0033 / 0038, F (10) 8499 0036
I www.atm-china.com, E info@atm-china.com

◆ China

Bronkhorst Shanghai
Instrumentation Trading Co., Ltd - Room 1002, Xinan
Building No. 99, Tianzhou Road, Shanghai 200233 China
T (21) 6090 7259, F (21) 6090 7260
I www.bronkhorst.cn, E info@bronkhorst.cn

◆ Czech Republic

D-Ex Instruments
Optátova 37, 63700 Brno
T 05-41423211, F 05-41221580
I www.dex.cz, E info@dex.cz

◆ Denmark

Insatech A/S
Algade 133, 4760 Vordingborg
T 55372095, F 55377018
I www.insatech.com, E mail@insatech.com

◆ Finland

Kontram Oy
Tuupakantie 32a, 01740 Vantaa
T 09-88664500, F 09-88664599
I www.kontram.fi, E kontram@kontram.fi

◆ France

Bronkhorst France S.A.S.
53 Rue Jacques Verniol
95370 Montigny-Les-Cormeilles
T 01-34508700, F 01-34508991
I www.bronkhorst.fr, E sales@bronkhorst.fr

◆ Germany (north)

Bronkhorst Mättig GmbH
Südfeld 1b, 59174 Kamen
T 02307-925120, F 02307-9251255
I www.bronkhorst-maettig.de
E info@bronkhorst-maettig.de

◆ Germany (south)

Wagner Mess- und Regeltechnik GmbH
Otto-Scheugenpflug-Str. 6, 63073 Offenbach
T 069-829776-0, F 069-829776-10
I www.wagner-msr.de, E info@wagner-msr.de

◆ Greece

Flow Control and Measurement
31, Ifigeneias street, GR176 72 Kallithea, Athens
T +30 210 9353080, F +30 213 0242466
I www.fcm.gr, E info@fcm.gr

◆ India-North

MTS Engineers Pvt. Ltd
B-408, Wall Street-II, Opp. Orient
Club, Nr. Gujarat College, Ellisbridge, Ahmedabad,
Gujarat 380006
T +91 79 26400063, F +91 79 40047430
I www.mtsengrs.com, E info@mtsengrs.com

◆ India-South

Toshniwal Systems and Instruments Pvt Ltd
267, Kilpauk Garden Road Chennai,
Tamil Nadu - 600010
T +91 44 26445626, F +91 44 26442810
I www.toshniwal.net, E sales@toshniwal.net

◆ Ireland

Flowcon Technology Ltd
Lisboy House
Blackrock Road, Cork
T 353 21 429 58 22, F 353 21 429 39 98
I www.flowcon.ie, E info@flowcon.ie

◆ Italy

Precision Fluid Controls S.R.L.
Via G. Watt 37, 20143 Milano
T 02-89159270, F 02-89159271
I www.precisionfluid.it, E precision@precisionfluid.it

◆ Japan

Bronkhorst Japan K.K.
Location 5-27-5, Toyo Koto-Ku
135-0016 Tokyo
T 03-3645-1371, F 03-3645-1377
I www.bronkhorst.jp, E sales@bronkhorst.jp

◆ Netherlands

Bronkhorst Nederland BV
Kerkwijk 65c, 3901 EC Veenendaal
T 0318-551280, F 0318-565025
I www.bronkhorst.nl, E verkoop@bronkhorst.nl

◆ New Zealand

Streat Control Ltd
PO Box 25-755, St Heliers, Auckland
T +64 9 575 2020, F +64 9 575 2020
I www.streatcontrol.com

◆ Norway

Flow-Teknikk AS
Olav Brunborgs v 27, N-1396 Billingstad
T 66775400, F 66775401
I www.flow.no, E mail@flow.no

◆ Poland

Zach Metalchem Sp. z o.o.
ul. Chorzowska 44c, 44-100 Gliwice
T 032-2702262, F 032-2704528
I www.metalchem.pl, E biuro@metalchem.pl

◆ Portugal

STV - Equipamentos para a Indústria e Laboratórios Lda
Rua Alberto Sanches Castro, Lote 21B Loja Esq.
2625-069 Póvoa de Santa Iria
T 0219563007, F 0219562997
I www.stv.pt, E geral@stv.pt

◆ Romania

Termodensiroam s.a.
Bd. Basarabia, Nr. 171, Sector 3, Bucuresti
T 021-2553170, F 021-2553170
I www.tdr.ro, E office@tdr.ro

◆ Russia

Sigm Plus Co.
3 Vvedenskogostr., 117342, Moscow
T 495-3333325, F 495-3344393
I www.massflow.ru, E info@massflow.ru

◆ Singapore

Flexisolve Technology Pte Ltd
10 Ubi Crescent, Ubi Tech Park, Lobby E,
#07-90 Singapore 408564
T 65-6743 5866, F 65-6745 3758
I www.flexisolve.com, E info@flexisolve.com

◆ Slovak Republic

D-Ex Instruments
Pražská 11, 81636 Bratislava
T 07-57297291, F 07-52499424
I www.dex.sk, E info@dex.sk

◆ South-Africa

Mecosa (PTY) Ltd
PO Box 651240, 2010 Benmore
T 112576100, F 112576123
I www.mecosa.co.za, E measure@mecosa.co.za

◆ Spain

Iberfluid Instruments S.A.
C/ Botànica, 122
08908 L'Hospitalet de Llobregat (Barcelona)
T 93-333 3600, F 93-334 0524
I www.iberfluid.com, E vft@iberfluid.com

◆ South Korea

Bronkhorst Korea Co. Ltd
STX W Tower 4th Floor 417
615-3 Gurodong Guro-gu Seoul
T +82 2 6124 4670, F +82 2 6124 4674
I www.bronkhorst.kr, E sales@bronkhorst.kr

◆ Sweden

Omniprocess AB
Vretenvägen 12, 17154 Solna
T 08-564 808 40, F 08-564 808 50
I www.omniprocess.se, E info@omniprocess.se

◆ Switzerland

Bronkhorst (Schweiz) AG
Nenzlingerweg 5, 4153 Reinach
T 061-7159070, F 061-7159079
I www.bronkhorst.ch, E info@bronkhorst.ch

◆ Taiwan

Bronkhorst Taiwan Co. Ltd
10F., No. 407, Sec. 6, New Taipei Boulevard
Taishan district, New Taipei City, 24355
T +886 2 29019299, F +886 2 29013006
I www.bronkhorst.tw, E sales@bronkhorst.tw

◆ Thailand

Tonitech Equipment and chemical co., Ltd
511/4 Soi Watchannai Chareonkrung Rd.
Bangkhoh Bangkok 10120 Bangkok
T 00662-291-6078, F 00662-291-2769
I www.tonitech.co.th, E info@tonitech.co.th

◆ Turkei

RAM Ölçü ve Kontrol Sistemleri Dis Ticaret Ltd. Sti.
Oruç Reis mh. Tekstilcent Ticaret Merkezi A4 Blok
No:26 Esenler 34235, Istanbul
T +90 212 320 09 95, F +90 212 320 09 96
I www.ram-limited.com, E info@ram-limited.com

◆ United Kingdom

Bronkhorst (UK) Ltd
1 Kings Court, Willie Snaith Road,
Newmarket, CB8 7TG Suffolk
T 01223-833222, F 01223-837683
I www.bronkhorst.co.uk, E sales@bronkhorst.co.uk

◆ U.S.A.

Bronkhorst USA Inc.
57 So. Commerce Way, Suite 120, Bethlehem, PA 18017
T 1-610-866-6750, F 1-610-866-9212
I www.bronkhorstusa.com, E sales@bronkhorstusa.com

Bronkhorst Cori-Tech B.V.

Nijverheidsstraat 2-6
7261AK Ruurlo The Netherlands
Tel. +31 573 458890 Fax. +31 842 292375
Email: info@bronkhorst-cori-tech.com
Internet: www.bronkhorst-cori-tech.com



Bronkhorst
CORI-TECH